


2.5" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

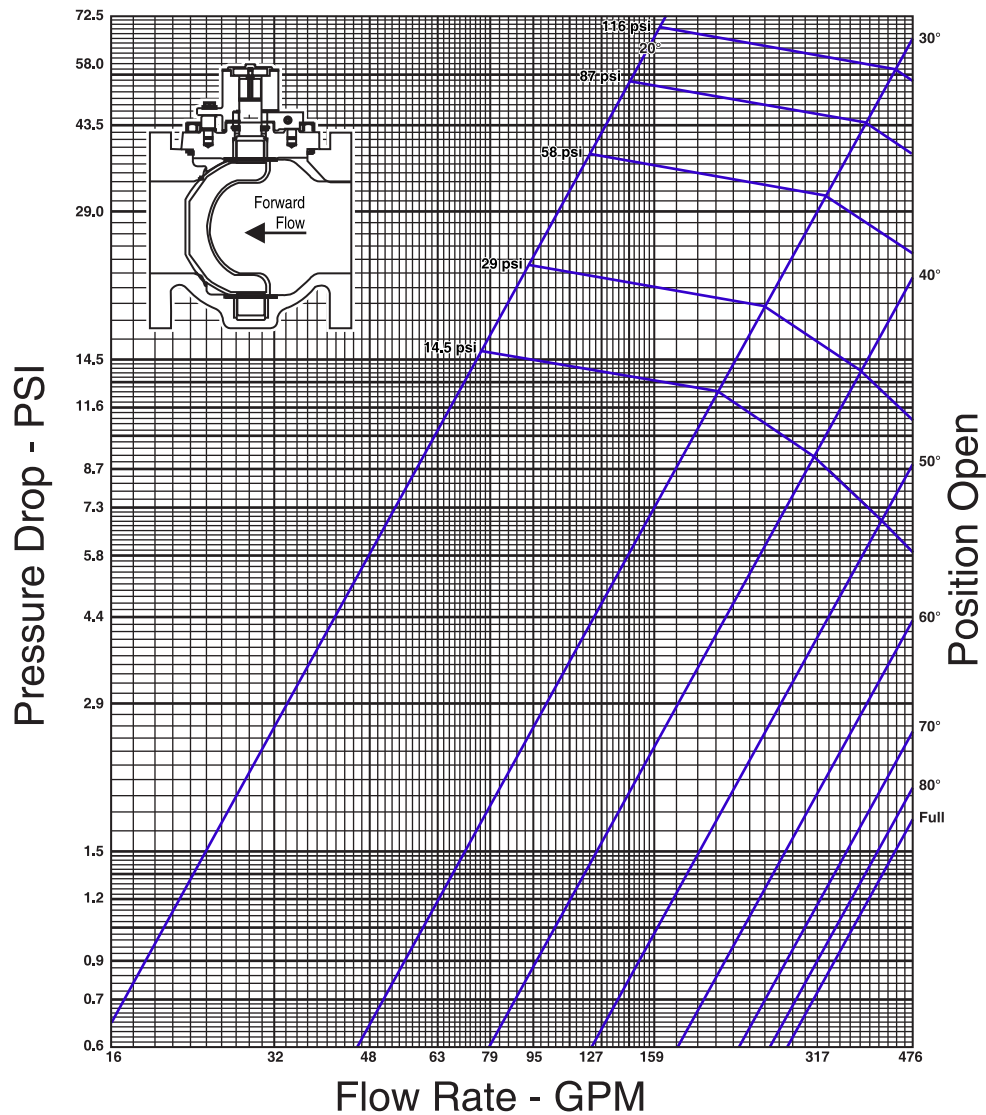


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	20	59	104	161	232	301	344	370

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

3" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

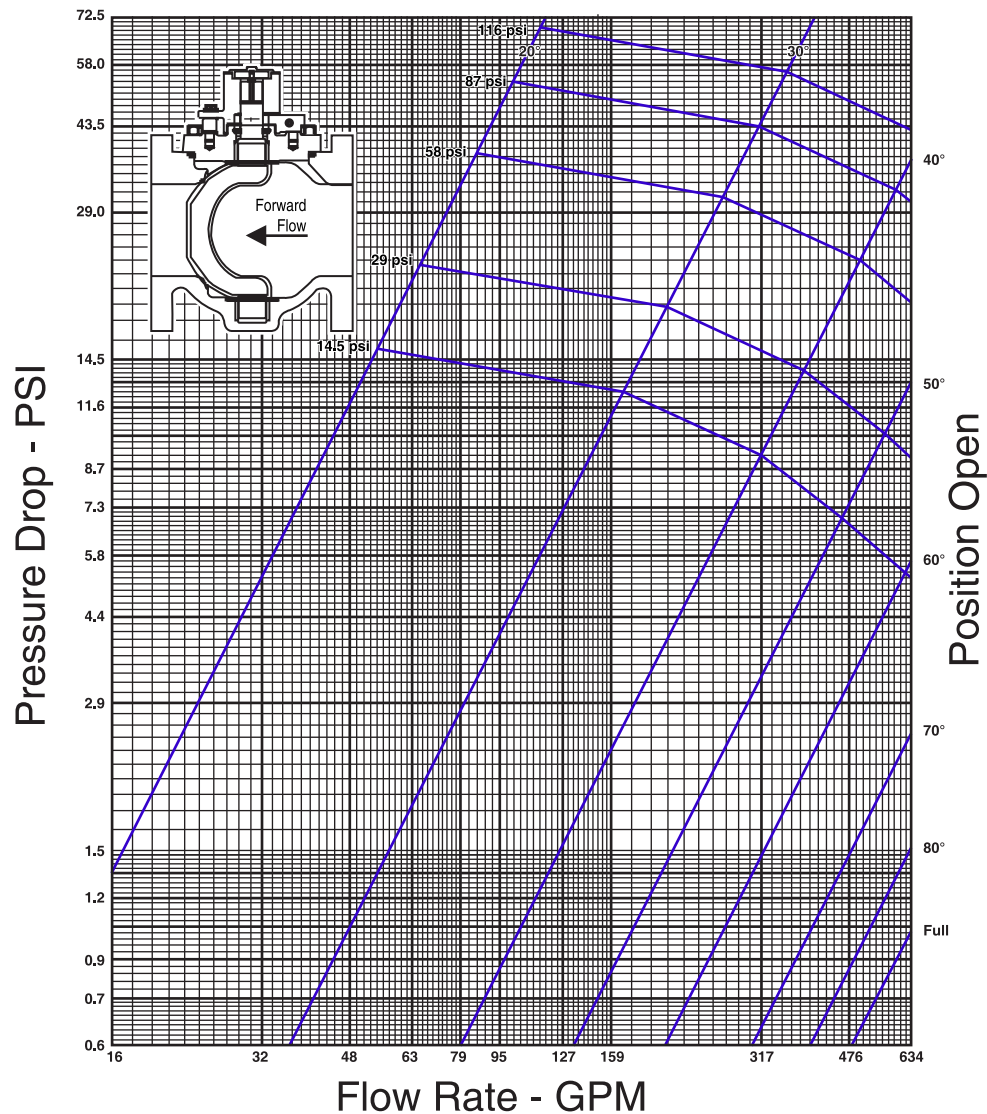


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	14	48	105	177	269.5	402	529	642

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

4" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

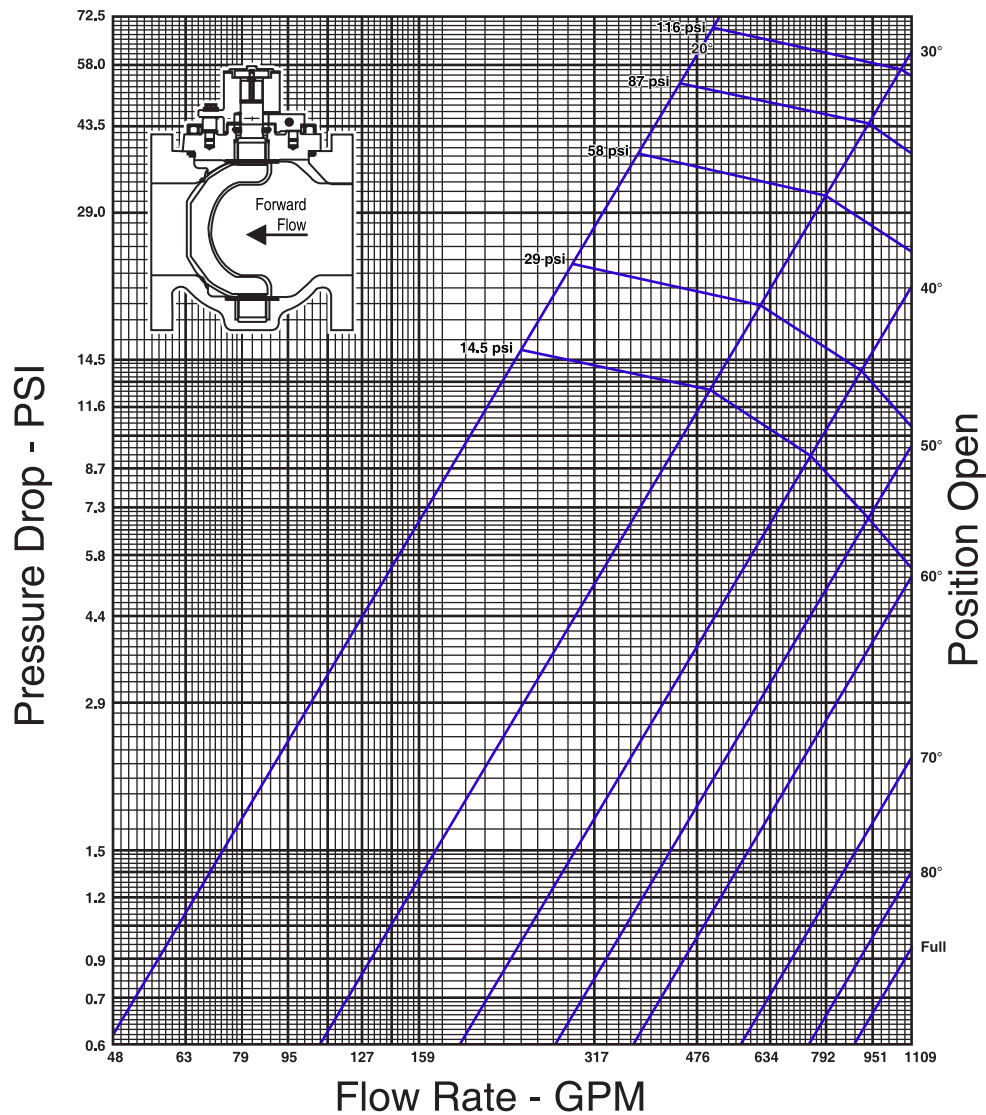

Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	62	142	247	360	490	749	980	1174

JOB NAME _____
 LOCATION _____


 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

American WHEATLEY
HVAC PRODUCTS®
A GFP COMPANY

2701 W. Concord Street
 Broken Arrow, OK 74012
 Toll Free: 866-204-5229
 PH: 918-317-0401
 FAX: 918-317-0407
 www.wheatleyhvac.com
 e-mail: sales@globalflowproducts.com

5" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

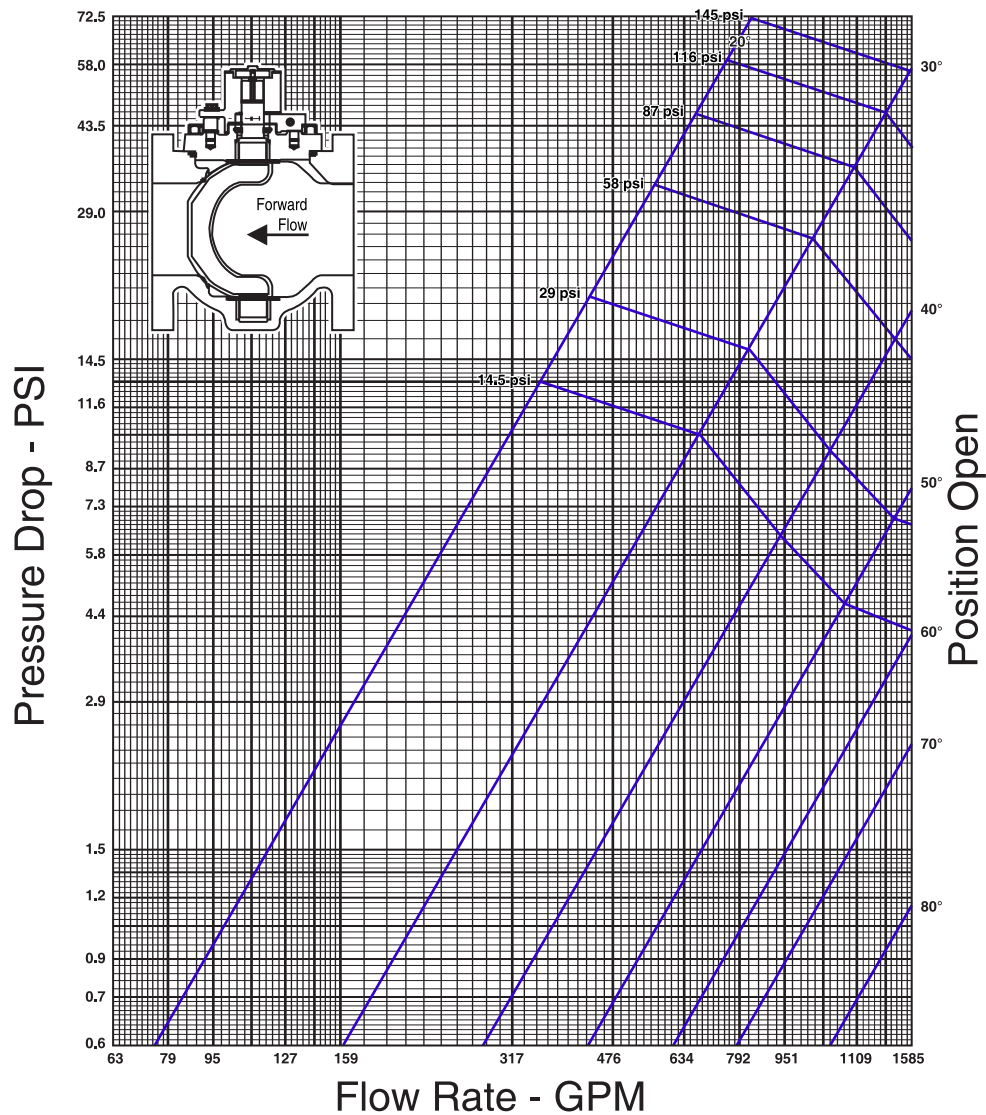


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	99	212	373	567	804	1038	1511	2218

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

6" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

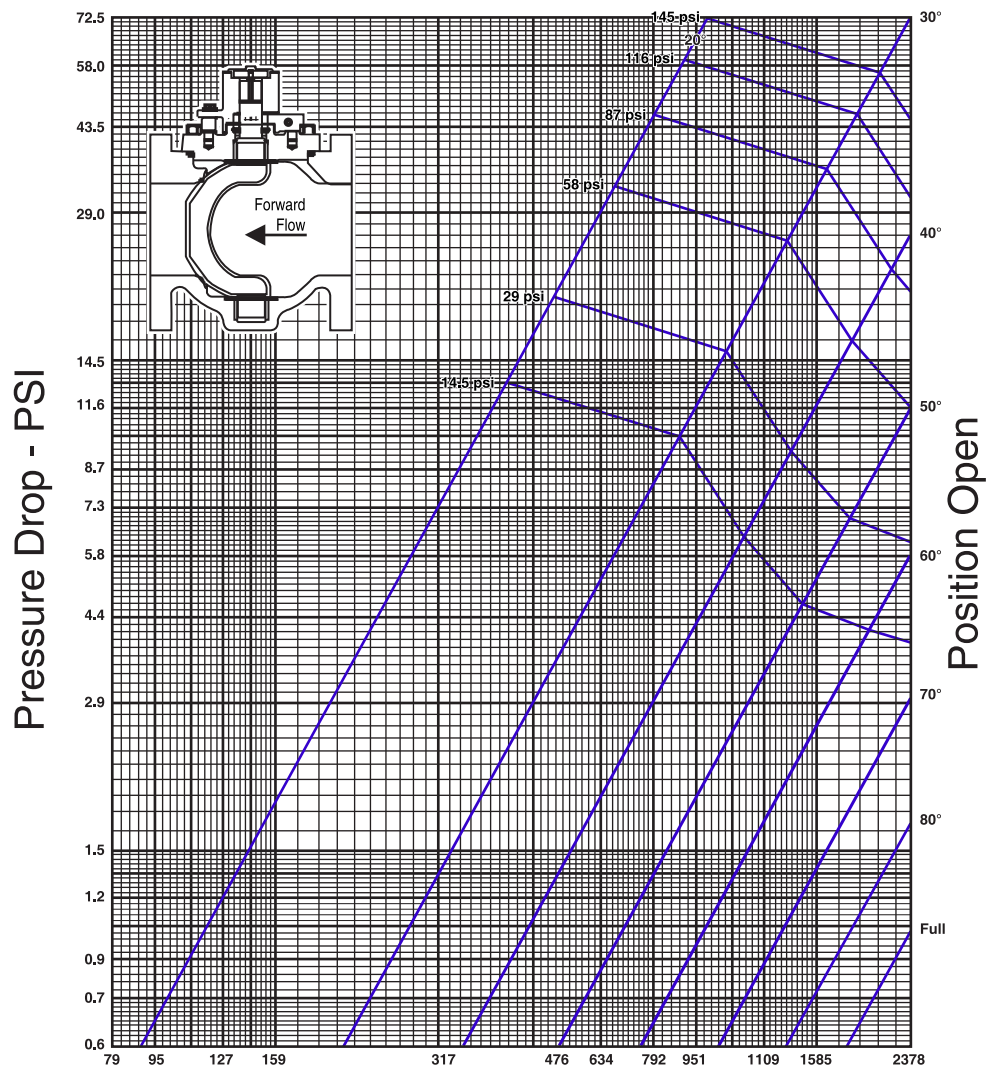


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	119	281	469	705	994	1386	1859	2400

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

8" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

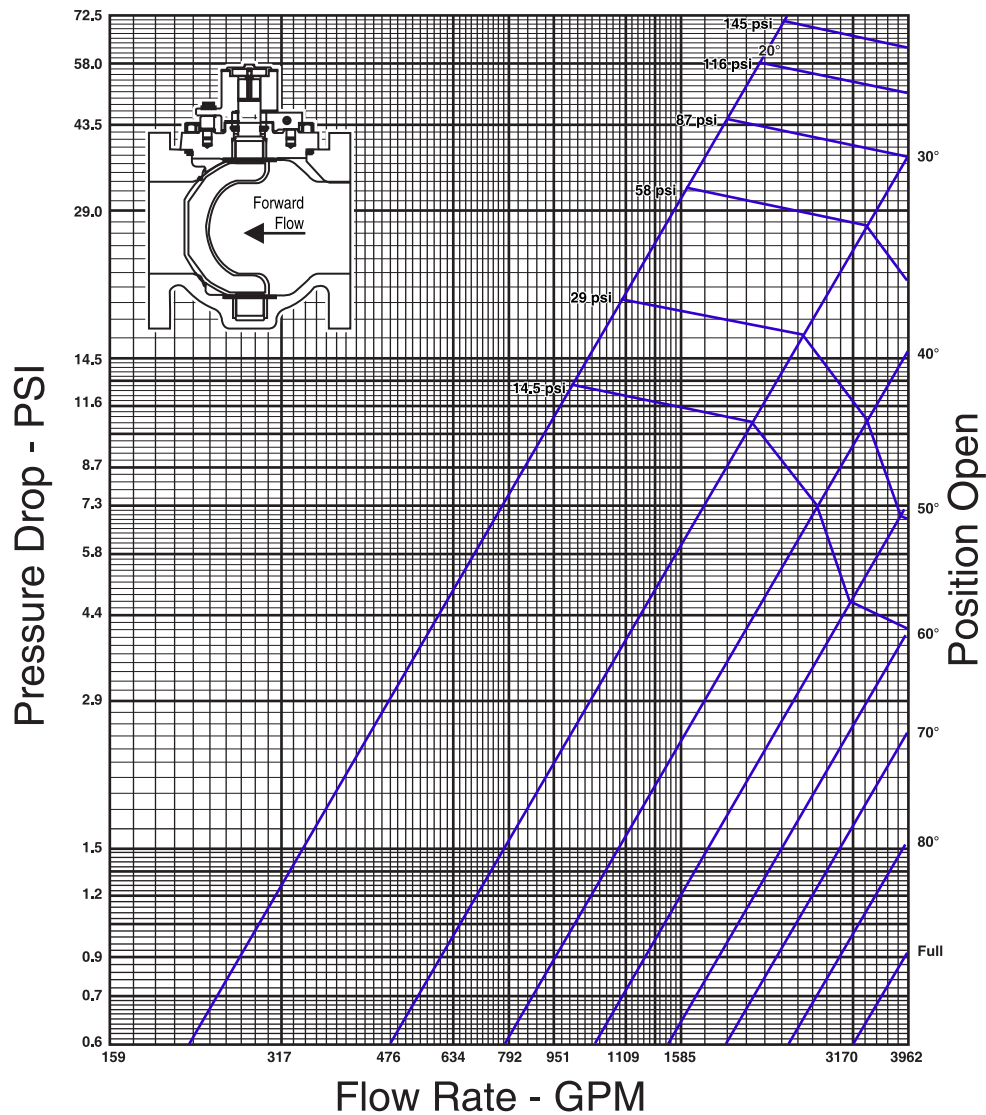


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	292	655	1042	1491	2012	2525	3267	4229

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

10" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

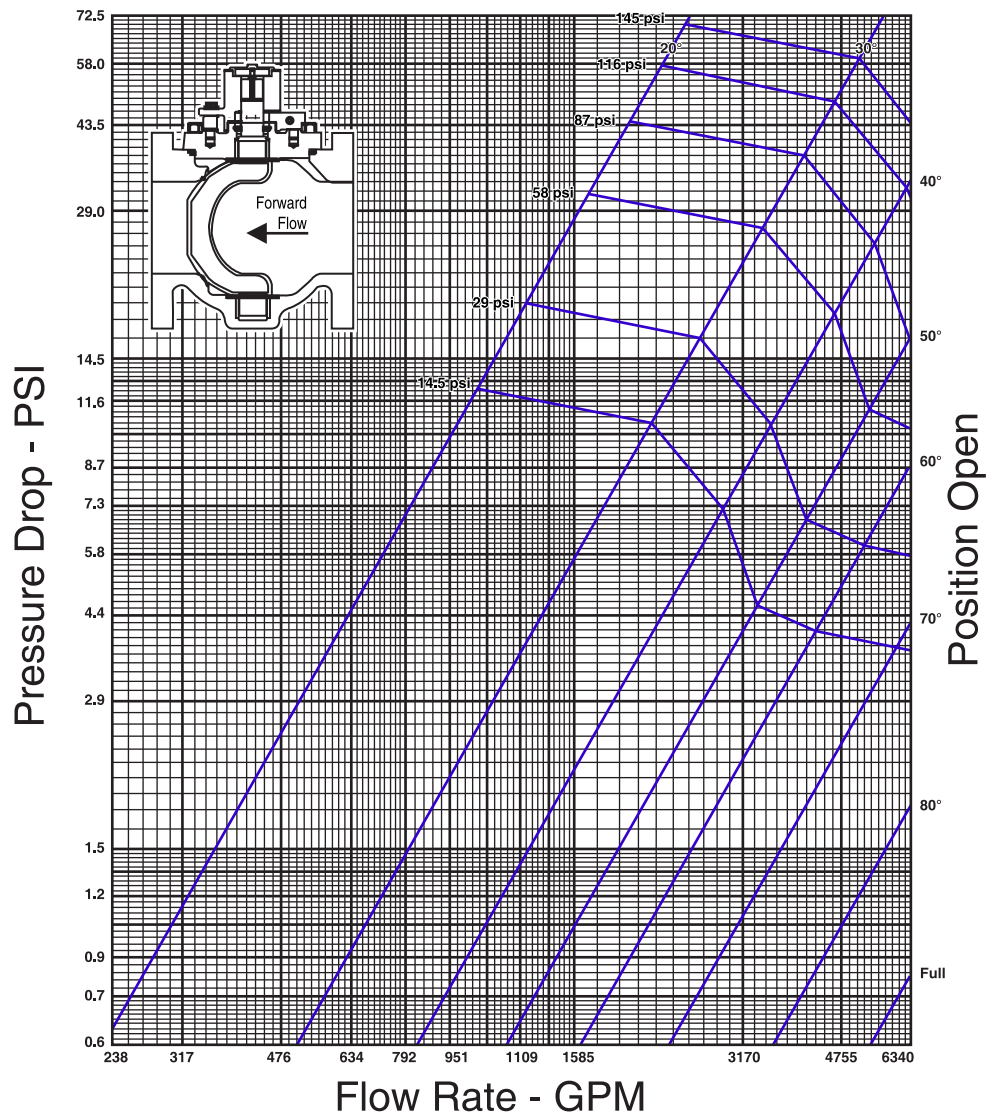


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	303	672	1104	1592	2160	3137	4779	7140

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

12" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

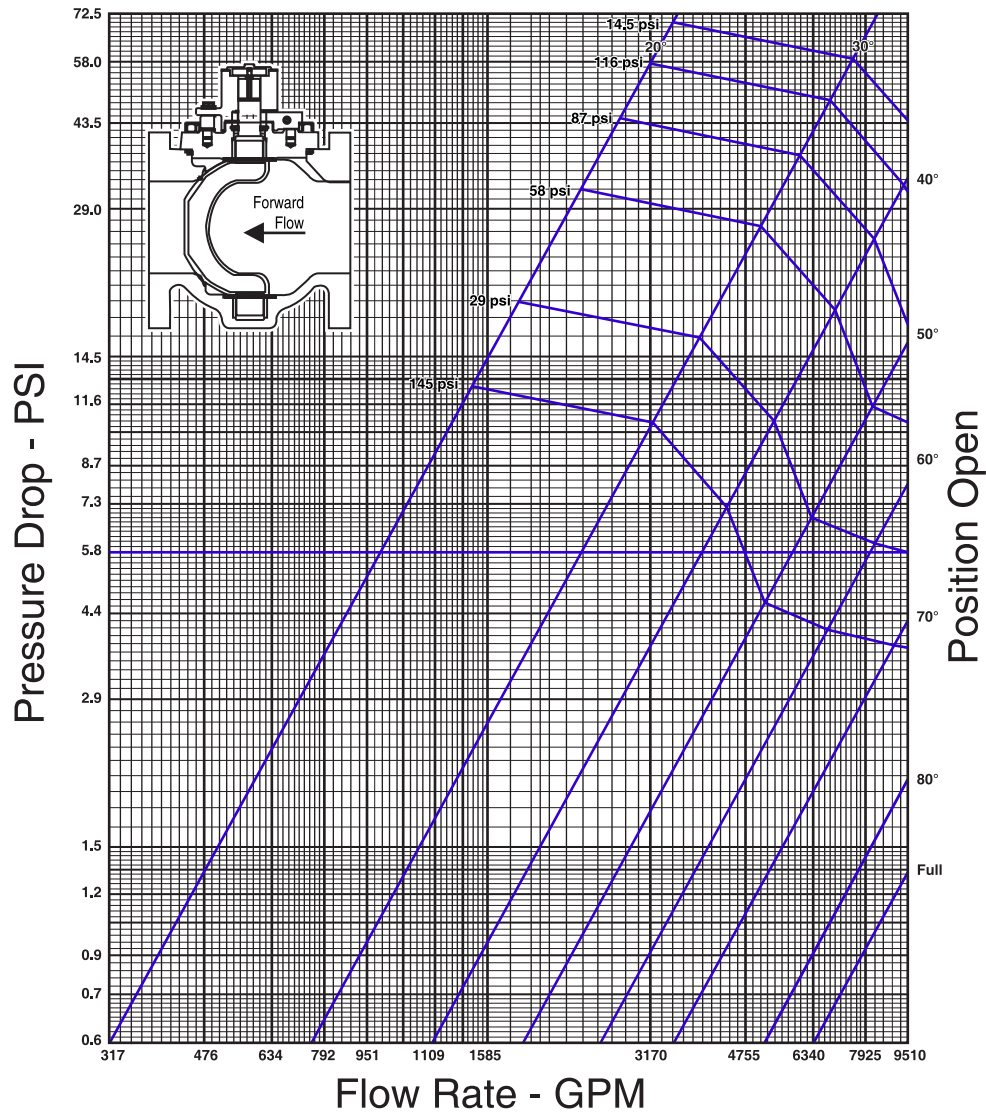


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	422	994	1656	2446	3397	4671	6833	8445

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

14" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

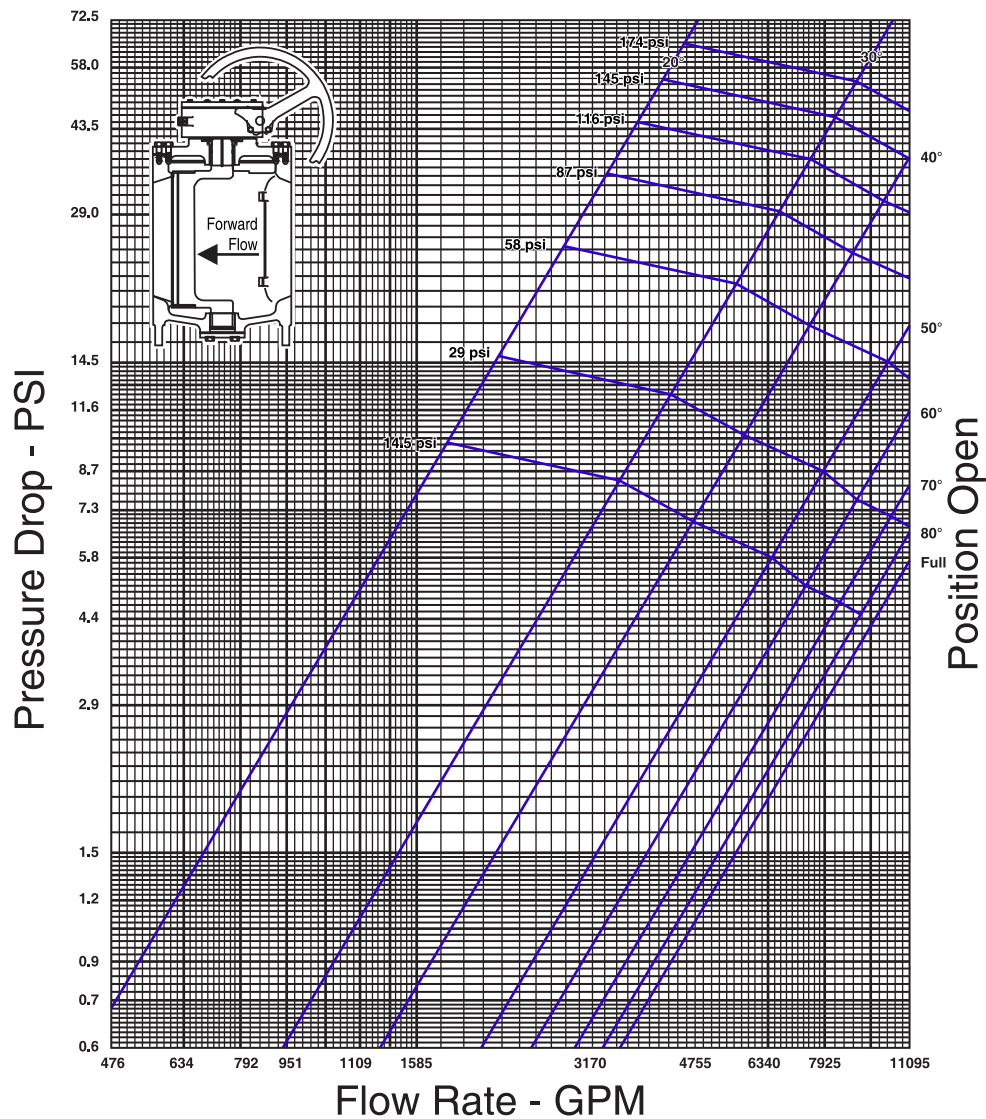


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	575	1237	1820	2704	3299	3914	4384	4675

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

16" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

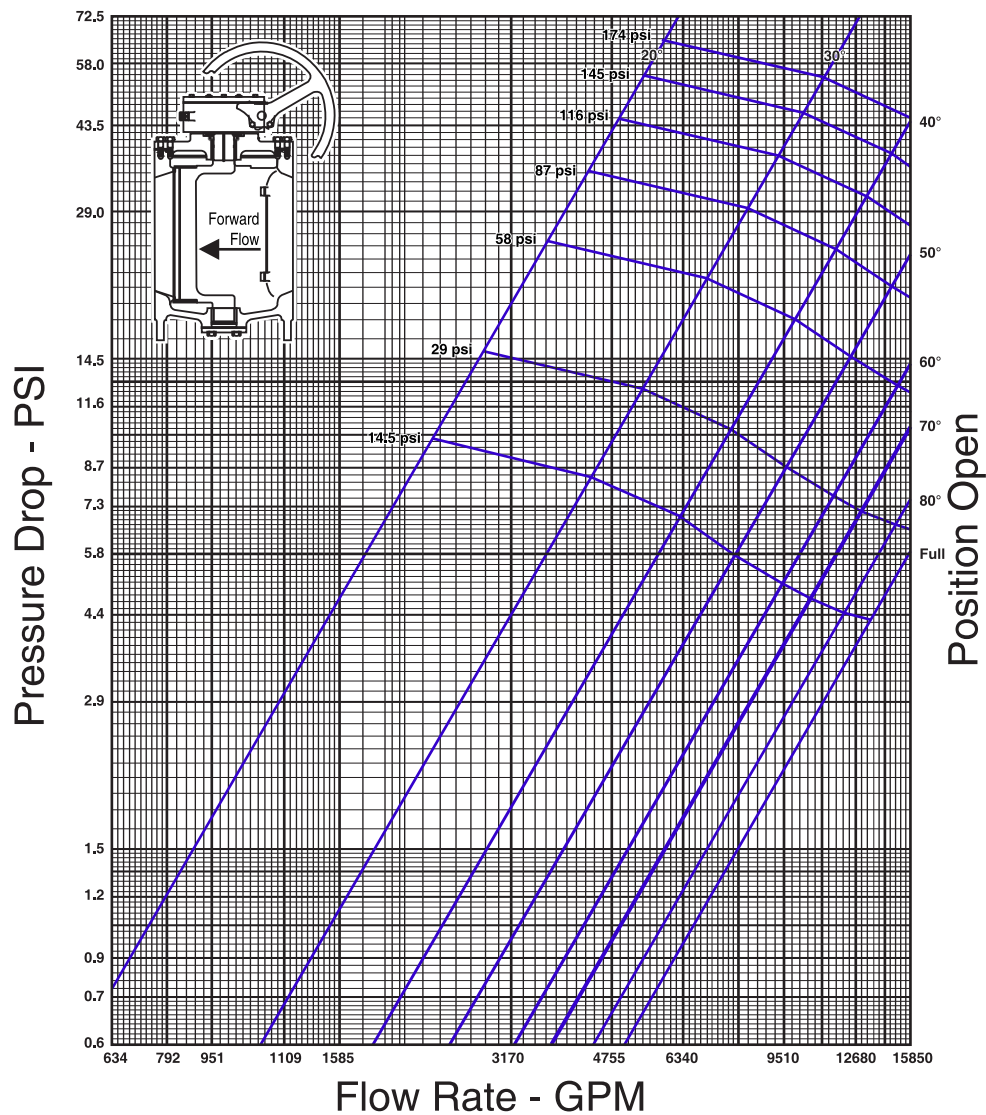


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	740	1529	2405	3276	4247	4935	5859	6637

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

18" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

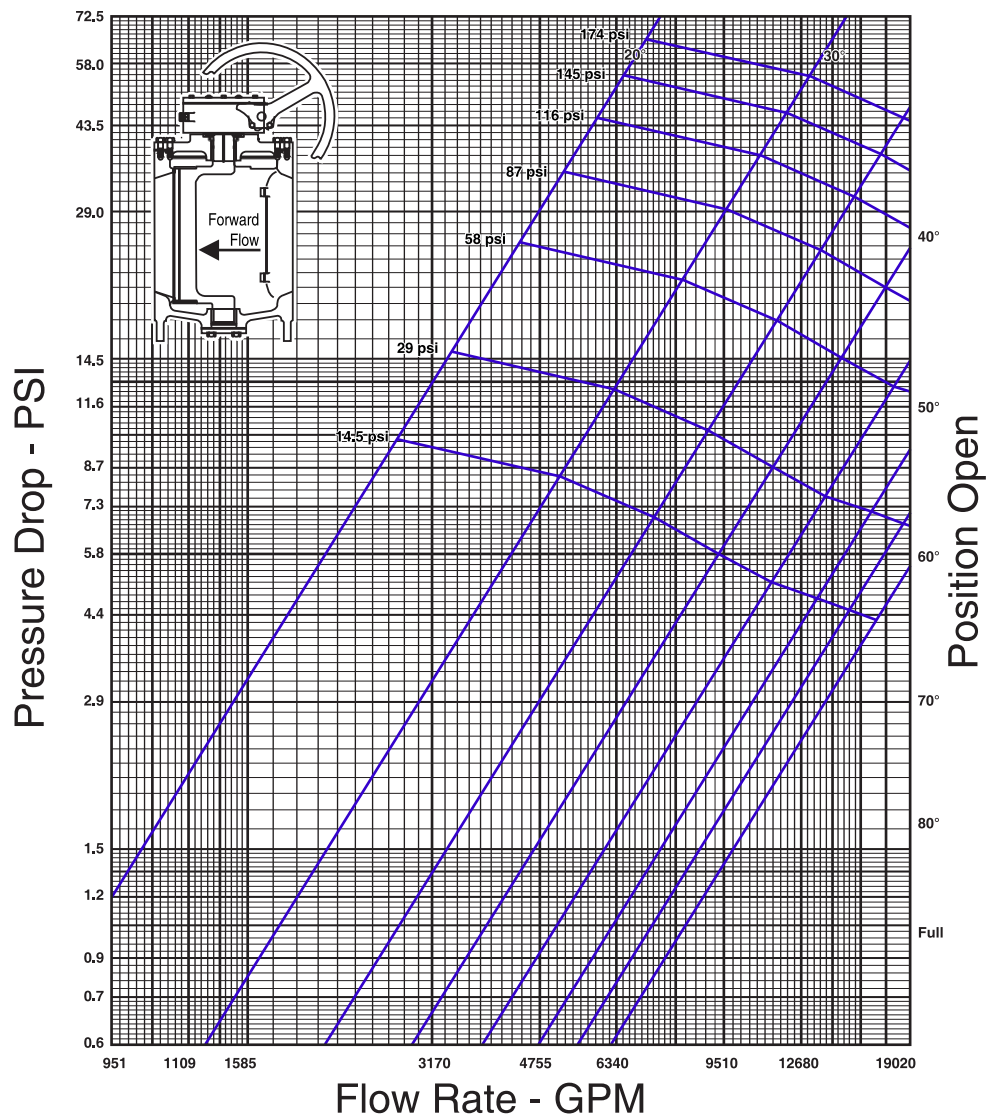

Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	888	1788	2793	3892	5073	6251	7245	8221

JOB NAME _____
LOCATION _____

CONTRACTOR _____
CONTRACTOR P.O. NO. _____

ITEMS QUANTITY


American WHEATLEY
HVAC PRODUCTS®
A GFP COMPANY

2701 W. Concord Street
Broken Arrow, OK 74012
Toll Free: 866-204-5229
PH: 918-317-0401
FAX: 918-317-0407

www.wheatleyhvac.com

e-mail: sales@globalflowproducts.com

20" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

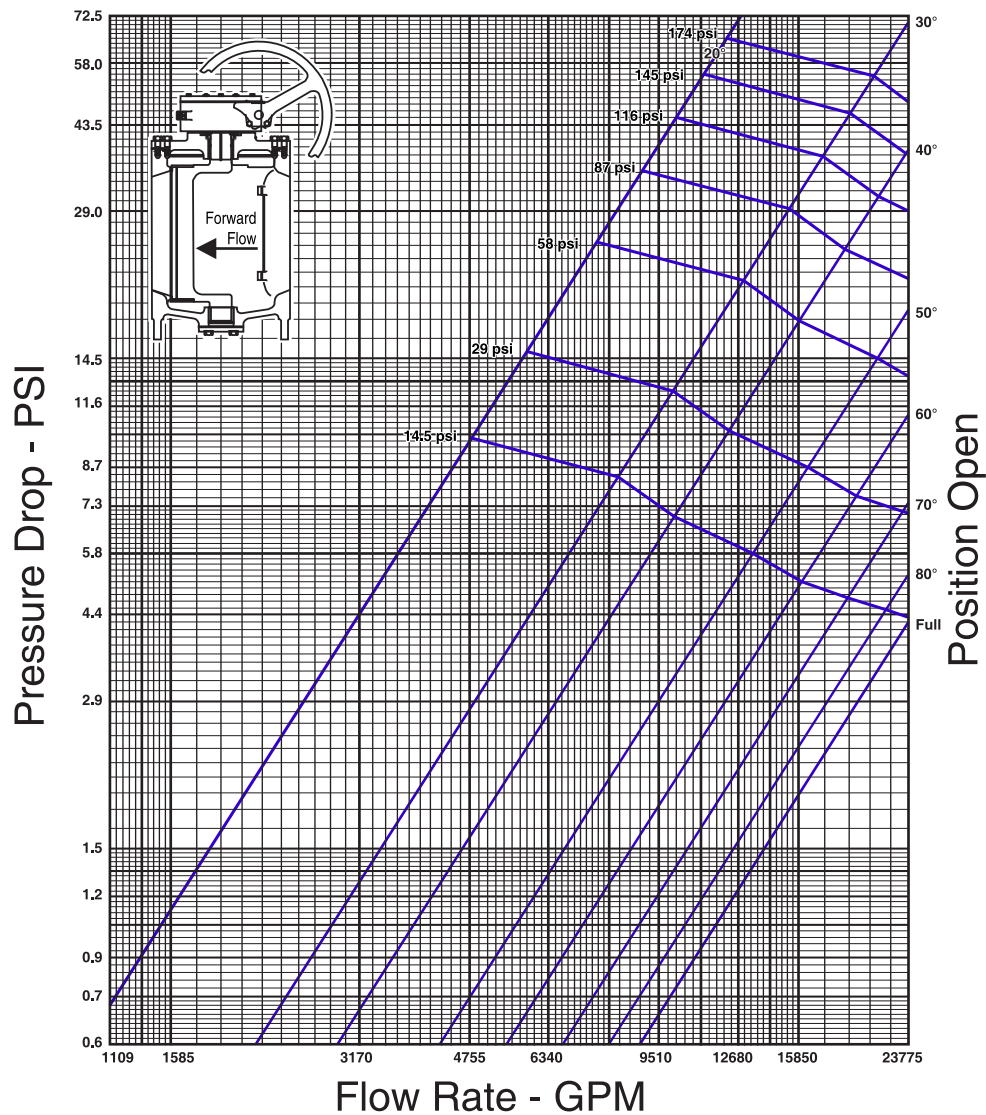


Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	1536	2874	3861	5646	7211	8867	10464	11714

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY

24" Plug Style Balancing Valve Pressure Drop Chart vs Flow Rate

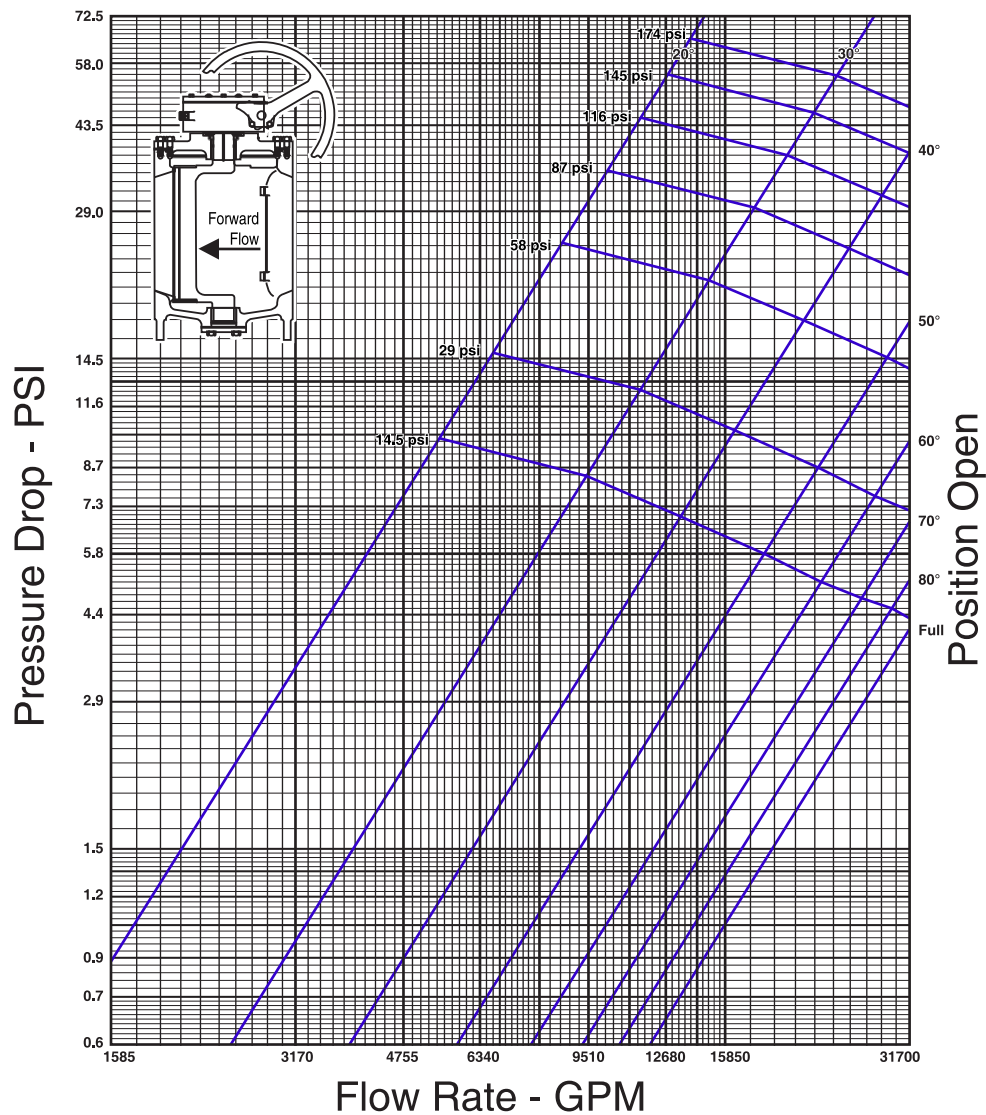

Position	20°	30°	40°	50°	60°	70°	80°	90°
Cv	1742	3287	5163	7690	10203	12338	14152	15881

JOB NAME _____
 LOCATION _____

 CONTRACTOR _____
 CONTRACTOR P.O. NO. _____

ITEMS QUANTITY
